

# TTL Input/Output trigger control box

Trigger software event in StreamPix / TroublePix / Hermes.

Drive output lines for controlling external devices

Monitor input lines to trigger the following software events:

- Start Recording,
- Stop Recording,
- Mark Frame,
- Generate Pre-Post,
- Snap a frame,
- Take Reference Time...

More advance software events can be programmed via scripting.

Drive output lines based on software status:

- Recording On,
- Recording Off,
- Live Capture On,
- Live Capture Off...

More than 20 different status can be programmed to drive output lines.

A total of 8 input and output lines can be added for an additional cost.

Requires a USB 2.0 port on the host computer



945 East 11th Avenue Tampa, FL 33605  
sales@pyramidimaging.com  
www.pyramidimaging.com  
813-786-3785